



PARTS LIST

SHE SUCTION OIL HEATER ELECTRIC TYPE

<u>Description</u>	<u>SHE 15B</u>	<u>SHE 20B</u>	<u>SHE 25B</u>	<u>SHE 30B</u>	<u>SHE 35B</u>
Heater Element	300928	300929	300930	300931	300932
Controller	300710	300710	300710	300710	300710
Flow Switch	301464	301464	301464	301575	301575
Load Fuse	300882	300882	300870	300883	300870
Primary Fuse	300878	300878	300878	300875	300875
Secondary Fuse	300885	300885	300885	300867	300867

<u>Description</u>	<u>SHE 40B</u>	<u>SHE 45B</u>	<u>SHE 50B</u>	<u>SHE 55B</u>	<u>SHE 60B</u>
Heater Element	300933	300934	300935	300936	300937
Controller	300710	300710	300710	300710	300710
Flow Switch	301576	301576	301576	300888	300888
Load Fuse	300870	300871	300871	300872	300872
Primary Fuse	300875	300875	300875	300875	300875
Secondary Fuse	300867	300867	300867	300867	300867

<u>Description</u>	<u>SHE 70B</u>	<u>SHE 80B</u>	<u>SHE 90B</u>	<u>SHE 100B</u>	<u>SHE 110B</u>
Heater Element	300938	300939	300940	300941	300942
Controller	300710	300710	300710	300710	300710
Flow Switch	300888	300888	300888	300888	300888
Load Fuse	300873	300871	300871	300872	300872
Primary Fuse	300875	300879	300879	300879	300879
Secondary Fuse	300867	300886	300886	300886	300886

<u>Description</u>	<u>SHE 120B</u>	<u>SHE 130B</u>	<u>SHE 140B</u>	<u>SHE 160B</u>	<u>SHE 200B</u>
Heater Element	300943	300944	300945	300946	300947
Controller	300710	300710	300710	300710	300710
Flow Switch	300888	300880	300880	300880	300880
Load Fuse	300873	300873	300871	300871	300872
Primary Fuse	300876	300876	300876	300876	300874
Secondary Fuse	300884	300884	300884	300884	300868

This page left intentionally blank.